



## **CHANGING DATE AND TIME USER GUIDE**

### **FOR PANASONIC KX-T76XX & KX-DT3XX SERIES HANDSETS**

#### **MANAGERS PROGRAMMING**

REQUIRES 7636, 7633, 7630, 333, 343, 346 HANDSETS

#### **CHANGING DATE & TIME**

1. PRESS PROGRAM
2. DIAL \*#1234
3. DIAL 000
4. PRESS ENTER
5. ENTER YEAR (00-99) THEN PRESS >
6. ENTER MONTH (PRESS AUTO ANS/MUTE BUTTON TO CHANGE) THEN PRESS >
7. ENTER DATE (01-31) THEN PRESS >
8. PRESS ENTER
9. PRESS NEXT
10. ENTER HOUR THEN PRESS >
11. ENTER MINUTES THEN PRESS >
12. ENTER AP/PM (PRESS AUTO ANS/MUTE BUTTON TO CHANGE)
13. PRESS ENTER
14. PRESS HOLD TO END
15. LIFT HANDSET THEN REPLACE

# Southern Business Communications Ltd

Head Office - Southern Business Communications Ltd, Unit 1, The Broadway, Andover, Hampshire, SP10 2JF  
Telephone: 01264 336644 - Fax: 01264 332083 - email: [info@sbclimited.co.uk](mailto:info@sbclimited.co.uk)